

# GAS SPRING BLEEDER INSTRUCTIONS

## Step 1

Make sure that the bleeder pin is not sticking out



Pin In



Pin Out

## Step 2

Attach bleeder to gas spring



Make sure the brass screw is not open

## Step 3

Turn "T" handle to pressurize the gauge



No gas should be leaking from bleeder

## Step 4

Use screwdriver to release gas



Re-tighten brass screw to stop gas release

## Step 5

Turn "T" handle to retract pin



The pressure on the gauge will stay the same

## Step 6

Open the brass screw to let the pressure out of the gauge



Make sure to re-close the brass screw again

## Step 7



You can now remove the gauge and make sure to reinstall the spring screw with the hex hole in the correct position